

MSH-RC2

Intelligent Remote Control Unit

Project Name:

Notes:

Date:

Туре:

# SCREEN DISPLAY, MEMORY & APPLY FUNCTION, OPTIONAL SCENES

BUTTON	FUNCTION	PERFORMANCE
C	ON/OFF	Turn ON or OFF the sensor.
MW/PIR	MW/PIR	Exchange from Microwave detection to PIR detection, for future use.
Scene	RESET	Press it to start detection programming; before pressing any other buttons, the screen shows default programming (Detection Area 100%, Holdtime SS, Daylight Disable, Standby Dimming 10%, Standby Period OS)
Start	START	Press it before you try to memorize program into the remote; After pressing it, Son the screen will blink and keeping blinking while making the program.
Memory	MEMORY	Press it after programming, the blinking Swill become a solid M, that means the program has been well memorized.
Apply	APPLY	Press it to deliver the preset program to the specific sensors; every presswill make the whole screen blink gently.
الله بر	DETECTION AREA	Also known as "sensitivity", 100% means the highest sensitivity and longest distance. Press it, specific icon on the screen will blink and press the + - buttons to adjust.
3	HOLD TIME	The period that light will stay illuminated 100% after no mo- tion's detected; Press it, specific icon on the screen will blink and press the +- buttons to adjust.
- Q	DAYLIGHT Threshold	The preset lux level to compare with ambient brightness when motion gets detected; Press it, specific icon on the screen will Threshold blink and press the + - buttons to adjust.
(3)	STAND-BY PERIOD	The period after holdtime, during which the light keeps standby dimming level; Press it, specific icon on the screen will blink and press the + - buttons to adjust.
×ې:	STAND-BY Dimming Level	After holdtime, the light will dim from 100% to optional standby dimming levels; Press it, specific icon on the screen will blink and press the + -buttons to adjust.
<b>A</b>	UP	The main functional buttons to adjust the factors to wanted level.
Ţ	DOWN	
POWER	POWER	Supports to manually change dimming output in detection mode; Press it, specific icon on the screen will blink and press the + - buttons to adjust.
Test 2s	TEST MODE	Supports to check if the sensor works correctly with a short 2S holdtime;Press it and the holdtime will change to 2S, and it can't be memorized

HOW TO USE MSH-RC2

REMOTE CONTROL DETECTION DISTANCE MAX. 60 FT



## SENSOR PROGRAMMING

- 1. ON/OFF button to turn on the light
- 2. SCENE button to start programming
- 3. Choose functional button of detection area, see icon blinking on the LCD screen display then use + buttons to change
- 4. Same programming with all the other functional buttons of hold time, standby dimming level, standby period and daylight threshold
- 5. Done and leave the remote
- \* Icon keeps blinking on the screen for 5S that means the program will then be kept after 5S.
- \* Each press will make sensor dim down light then back to100%, it means remote signal has been well received.

# MEMORY AND APPLY

@the 1st sensor

- 1. ON/OFF button to turn on the light
- 2. SCENE button to start programming
- 3. START button
- 4. Choose functional button of detection area, see icon blinking on the LCD screen display then use + buttons to change
- 5. Same programming with all the other functional buttons of hold time, standby dimming level, standby period and daylight threshold
- 6. MEMORY button
- 7. APPLY button
- @the other sensors
- 1. ON/OFF button to turn on the light
- 2. SCENE button to start programming
- 3. APPLY button

#### MANUAL DIMMING ON/OFF mode

- 1. ON/OFF button to turn on the light
- 2. Press+- button to dim light directly, it dims from 10% to 100%

## DIMMING mode

- 1. ON/OFF button to turn on the light
- 2. SCENE button to start programming
- 3. POWER button
- 4. +- buttons to dim light, but it only dims from 60% to 100%; 50% is one of the standby dimming level options

\* NUMBER ON LCD SCREEN DISPLAY MAY KEEP CHANGING 10%-100%.

