

# INSTALLATION INSTRUCTIONS

## PT-WPH3 SERIES

PT-WPH3-LW-3CP / PT-WPH3-HW-3CP

**PORTOR**  
LIGHTING  
a PORTOR INDUSTRY brand



TUNABLE  
3 CCT  
SELECTABLE  
WATTAGE  
3 W  
SELECTOR

(Easily flip the switch for desired CCT and Wattage)

### CAUTION

- AVOID DIRECT EYE EXPOSURE TO THE LIGHT SOURCE WHILE IT IS ON.
- ACCOUNT FOR SMALL PARTS AND DESTROY PACKING MATERIAL, AS THESE MAY BE HAZARDOUS TO CHILDREN.
- **RISK OF BURN.** DISCONNECT POWER AND ALLOW FIXTURE TO COOL BEFORE CHANGING BULB OR HANDING FIXTURE.

### READ THESE INSTRUCTIONS COMPLETELY AND CAREFULLY

#### SAFETY

THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND APPLICABLE LOCAL CODES AND ORDINANCES. PROPER GROUNDING IS REQUIRED TO INSURE PERSONAL SAFETY. CAREFULLY OBSERVE THE GROUNDING PROCEDURE UNDER INSTALLATION SECTION. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

- **RISK OF ELECTRIC SHOCK** - DISCONNECT POWER AT FUSE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING.
- **RISK OF PERSONAL INJURY** - FIXTURE MAY BECOME DAMAGED AND/OR UNSTABLE IF NOT INSTALLED PROPERLY. TIGHTEN ALL FIXTURE COMPONENTS TO THEIR RECOMMENDED TORQUE VALUES.


#### WARNING

- TURN OFF ELECTRICAL POWER AT FUSE OR CIRCUIT BREAKER BOX BEFORE WIRING FIXTURE TO THE POWER SUPPLY.
- TURN OFF THE POWER WHEN YOU PERFORM ANY MAINTENANCE.
- VERIFY THAT SUPPLY VOLTAGE IS CORRECT BY COMPARING IT WITH THE LUMINAIRE LABEL INFORMATION.
- ALL WIRING CONNECTIONS SHOULD BE CAPPED WITH UL APPROVED WIRE CONNECTORS.


### INSTALLATION (ALWAYS TURN OFF THE POWER SUPPLY FROM MAIN CIRCUIT BREAKER FIRST!)

1. Open the cover by unscrewing the screws that are located on the side of the wall pack.
2. Fix the rear housing on the wall.

**METHOD 1:** Remove the pre-cast locators at the back of the rear housing, and fix the fixture with 4 screws (not provided) to the standard junction box on the wall.

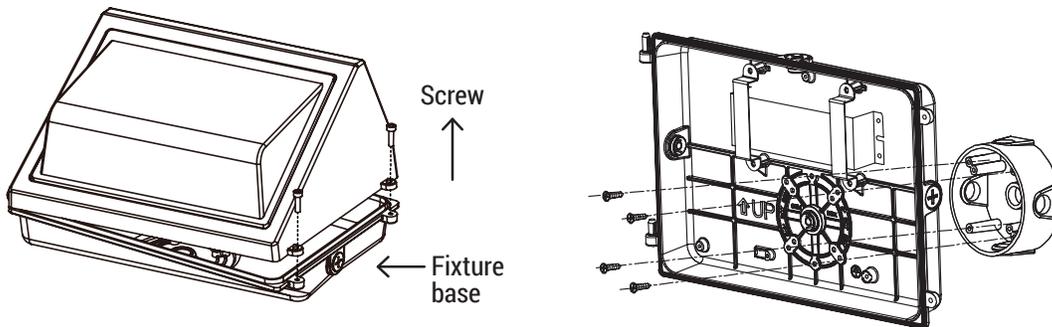

**METHOD 2:** Drill holes at the required three mounting points, mount the fixture by securing mounting screws (not provided) through the drilled holes, and seal the screw heads with appropriate waterproofing material.

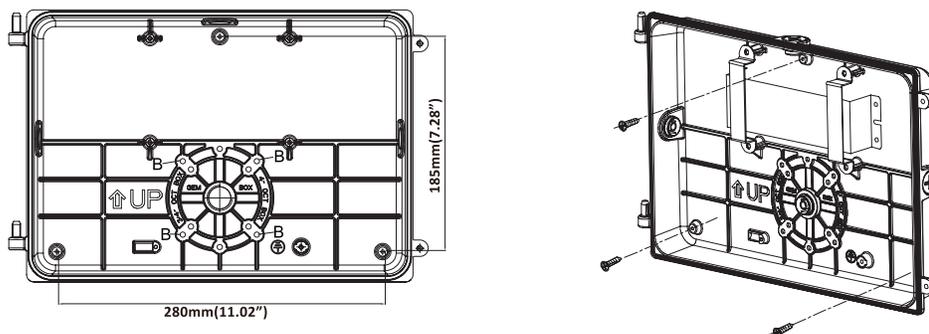

# INSTALLATION INSTRUCTIONS



## PT-WPH3 SERIES

PT-WPH3-LW-3CP / PT-WPH3-HW-3CP



### INSTALLATION (ALWAYS TURN OFF THE POWER SUPPLY FROM MAIN CIRCUIT BREAKER FIRST!)

**3.** Connect the male and female connectors together, and select your required CCT and power by the DIP switch.

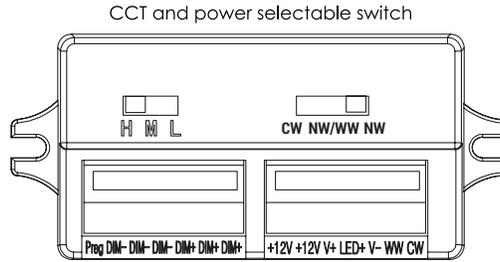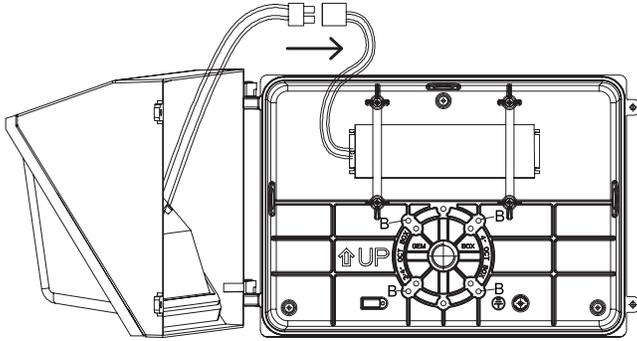


<b>Color Setting:</b>	
CW:	5000K (default)
NW/CW:	4500K
NW:	4000K
<b>Power Setting:</b>	
H:	100% (default)
M:	80%
L:	60%

**4.** Remove the 2 leaking plugs from the housing. Close the diffuser door and lock it with the 2 diffuser door screws.

**5.** Make sure all wiring access holes are sealed properly for waterproofing purposes.

**6.** Turn on the electricity to verify your successful installation.

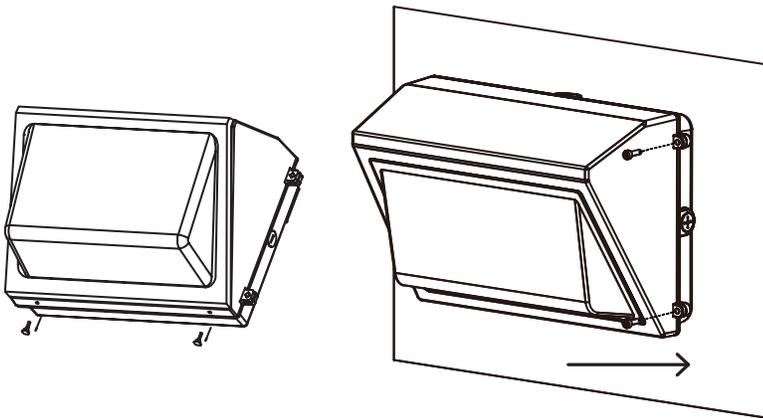

### WIRING DIAGRAM

